

Baofeng Controls Quick Guide

Top

- **Knob** – On/off/volume

Left

- **CALL red** – Tap, FM broadcast radio on/off. Hold, Alarm (sound/light) tap to stop. Set menu 32 to “site” or it transmits.
- **PTT** – Push to talk. Press, wait, talk.
- **Moni** – Tap, flashlight, second tap blinks. Hold, to monitor frequency to check for traffic.

Right

Kenwood style speaker/mic plugs. Also used for programming.

Face

- **VFO/MR red** – Frequency and Channel modes. Frequency is manual tuning. Channels are memories.
- **A/B blue** – Select top or bottom display to transmit on. Menu 34 to off.
- ***SCAN** – Hold to start scan. Tap to reverse. (Listen to repeater input.)
- **0 SQL** – Hold to see battery voltage.
- **# KEY** – Hold to lock keypad. Tap to change transmit power. (Doesn't change memory setting, temporary.)
- **Menu** – Menu, then pick memery, menu, enter setting, menu, save setting.
- **Arrows** – For frequencies, channels or menus.
- **Exit** – Exit menu without saving.
- **Numbers** – To enter frequencies or menus.
 - The blue text are shortcut reminders. 0-9 are single digit often used menu items. * and # are scan and lock.

Takes SMA female antennas.

Baofeng Controls Quick Guide

Top

- **Knob** – On/off/volume

Left

- **CALL red** – Tap, FM broadcast radio on/off. Hold, Alarm (sound/light) tap to stop. Set menu 32 to “site” or it transmits.
- **PTT** – Push to talk. Press, wait, talk.
- **Moni** – Tap, flashlight, second tap blinks. Hold, to monitor frequency to check for traffic.

Right

Kenwood style speaker/mic plugs. Also used for programming.

Face

- **VFO/MR red** – Frequency and Channel modes. Frequency is manual tuning. Channels are memories.
- **A/B blue** – Select top or bottom display to transmit on. Menu 34 to off.
- ***SCAN** – Hold to start scan. Tap to reverse. (Listen to repeater input.)
- **0 SQL** – Hold to see battery voltage.
- **# KEY** – Hold to lock keypad. Tap to change transmit power. (Doesn't change memory setting, temporary.)
- **Menu** – Menu, then pick memery, menu, enter setting, menu, save setting.
- **Arrows** – For frequencies, channels or menus.
- **Exit** – Exit menu without saving.
- **Numbers** – To enter frequencies or menus.
 - The blue text are shortcut reminders. 0-9 are single digit often used menu items. * and # are scan and lock.

Takes SMA female antennas.